


TB-37-45-2671 ALTERNATOR  
 120AMP - TRIPAC UNITS ONLY

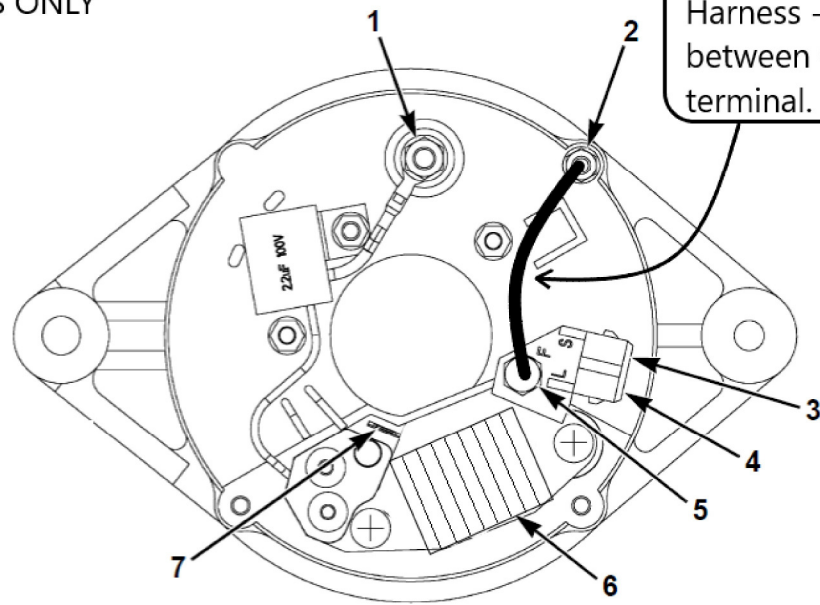

Units without Load Control  
 Harness - Install Jumper Wire  
 between GRND & FLD  
 terminal.

1.	B+ Terminal (Positive Output - RED )	5.	F2 Terminal (Do Not Ground)
2.	B- Terminal (Negative Ground - CH Wire)	6.	Voltage Regulator and Brush Assembly
3.	S Terminal (Regulator Sense - 2A Wire)	7.	W Terminal (AC Output)
4.	L Terminal (Regulator Excite - D+ Wire)		